




ITS TIME TO GET YOUR *EFFORT REWARDED.*

Thank you for your MYZONE® purchase! In this box, you will find all the tools you need to set up the MYZONE® system in your facility.


THIS BOX INCLUDES:

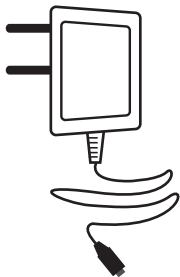

**1. MYZONE® STICK AND
POWER CORD**



**2. MYZONE®
RECEIVER**

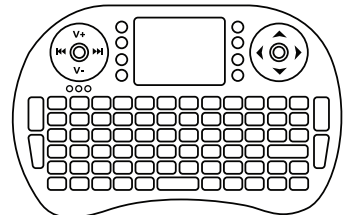

**3. MINI KEYBOARD
REMOTE**

If you notice anything is missing, please contact our support team at support@myzone.org as soon as possible.

READY TO GET STARTED?


Turn this document over to learn how to install the MYZONE® system in your facility.

MYZONE® STICK INSTALLATION GUIDE


1 Remove the MYZONE® Stick from packaging.

2 Connect power cable supplied with your MYZONE® Stick to the MYZONE® Stick and a power outlet located near the TV.

- a. The power cable will connect through a Micro-USB port located on the left-hand side of the MYZONE® Stick.

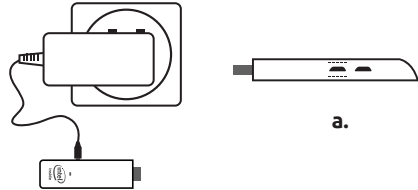

3 Connect the MYZONE® stick to the HDMI port on your TV.

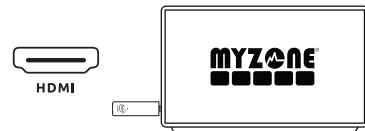

4 Make sure the MYZONE® Stick is powered on. You will know the Stick is powered on when you see a blue light on the Stick.




- * The Stick may automatically power on once inserted into the TV; however, if it does not there is a power button on the left side of the Stick.

5 Power on the mini keyboard remote by switching on the power button located on the top of the keyboard.



6 Using the mini keyboard remote connect to your internet.

- a. Click the wifi icon located at the bottom right hand corner of your screen.
b. Click on your facilities wifi internet and click 'connect'.

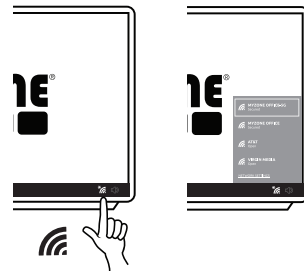

At this point, please contact our support team at support@myzone.org or via live chat to continue your installation.